

Anleitung zum Aufbringen der Piktogrammfarbe

Liebe Kunden,


Sie haben ein timkid Wandwickeltisch erworben, bei dem Sie die Hintergrundfarbe des Piktogramms farblich anpassen können. Bitte beachten Sie für das Ändern der Hintergrundfarbe folgende Hinweise:

WICHTIG!

Die untere Einlegeplatte muss hierfür dem Wickeltisch entnommen werden!

Es empfiehlt sich, die Farbänderung nach der Montage des Wandwickeltisches durchzuführen!


1. Entfernen Sie zunächst die Klebestreifen, die die beiden Einlegeplatten fixieren. Drücken Sie dann von unten mit dem Finger in die Mitte des Piktogramms, um die vordere Platte anzuheben

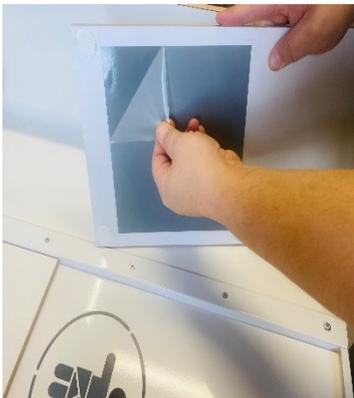

2. Ziehen Sie nun die vordere Einlegeplatte aus der Fassung nach hinten heraus.



3. Drehen Sie nun die Platte, um hier die Folie aufzukleben. Ziehen Sie die Schutzfolie der farbigen Folie ab und bringen Sie diese in Höhe des Piktogramms auf.

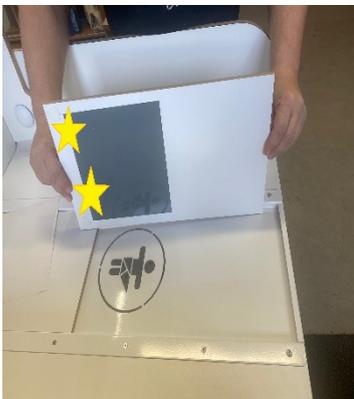

4. Bevor Sie die Einlegeplatte wieder einsetzen, entfernen Sie bitte die Schutzfolien der beiden kleinen Klebepads! (siehe ★)



5. Setzen Sie die vordere Platte wieder ein.



6. Setzen Sie die vordere Platte wieder ein. Kleben Sie danach den weißen Klebestreifen über die Nut der beiden Einlegeplatten.

Stand: 11 | 2022

Instructions for applying the pictogram colour


Dear customers,

You have purchased a timkid wall changing table where you can change the background colour of the pictogram. Please note the following when changing the background colour:

IMPORTANT!

The lower insert plate must be removed from the changing table for this purpose!
It is advisable to carry out the colour change after the installation of the wall changing table!

1. First remove the adhesive strips that fix the two insert plates. Then press your finger in the middle of the pictogram from below to lift the front panel.

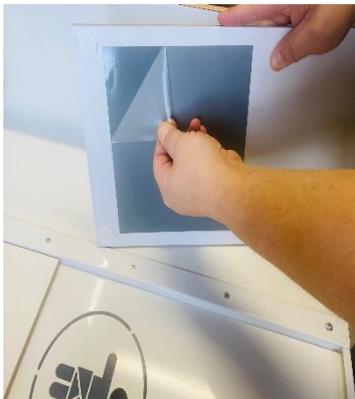

2. Now pull the front insert plate backwards out of the socket.



3. Now turn the plate to stick the foil here. Peel off the protective film from the coloured foil and apply it at the level of the pictogram.



4. Before you reinsert the insert plate, please remove the protective film from the two small adhesive pads!
(please refer )



5. Reinstall the front panel.



6. Then stick the white adhesive strip over the groove of the two insert plates.

version: 11 | 2022